

**Detailed Programming Instructions for
Standard 120vac Operations**
Phone has been preset to Standard SmartPhone V Operation
SmartPhone V with Capability of 10 phones per line

On-Board Programming

Step 1. Begin Program Mode

- A. Press Enter

Step 2. Program Emergency Numbers

- A. Press 1, Enter, (Phone Number), Stop
Note: Press 2-5 in Step 2A For Emergency Numbers
2-5 As Needed

Step 3. If Ring Down (No Dial Tone) (Skip Step 3)

- A. Press 1, Enter, Pause, Stop
B. Press 9, Enter, 0

Step 4. Program Location Message


- A. To Turn On Message Press 1, 3, Enter, 2
B. Press 6, Record, (Speak Your Message), Stop
(To Replay Message Press 6, Play)
C. Program Frequency of Message Press 1, 3, Enter, _
1= Plays Message (1) Time
2= Plays Message (2) Times (Default)
3= Plays Message Until Receiving Party Presses *
On Their Phone
D. For No Message Press 1, 3, Enter, 0

Step 5. Change Telephone Security Code (Default 1111)

- A. Press 2, 2, Enter, (Desired 4-digit code)
Note: Cannot be 0000

Step 6. To Exit Program Mode

- A. Press Stop For 3 Seconds

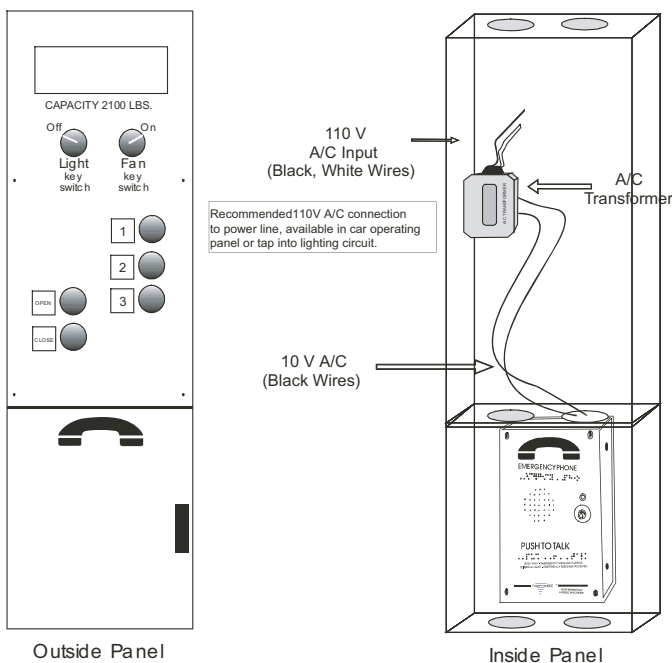

SmartPhone V Consolidator Feature

Step 1. Begin Program Mode

- A. Press Enter

Step 2. Program ID Numbers for Phones 1-5

- A. Press 7, Enter
B. Press *, 1-5 for Corresponding Elevator (1-5)

Step 3. Program ID Numbers for Phones

- A. Press 7, Enter
B. Press #, 1-5 for Corresponding Elevator

Step 4. Confirm Consolidator

- A. Dial Phone Number SmartPhones are Installed on
All Phones Will Answer
B. To Select Individual Phone
Press *1 (Phone #1) Press #1 (Phone #6)
Press *2 (Phone #2) Press #2 (Phone #7)
Press *3 (Phone #3) Press #3 (Phone #8)
Press *4 (Phone #4) Press #4 (Phone #9)
Press *5 (Phone #5) Press #5 (Phone #10)
Press * 0 (All Phones)

Step 5. To Exit Program Mode

- A. Press Stop For 3 Seconds

Remote Programming

Step 1. Begin Program Mode

- A. Call Into Phone
B. After 1st Simulated Ring Press #, #
C. Key in Security Code (Default is 1111)

Step 2. Program Emergency Numbers

- A. Press 1, *, (Phone Number), *, #
Note: Press 2-5 in Step 2A for Emergency Numbers
2-5 As Needed

Step 3. If Ring Down (No Dial Tone) (Skip Step 3)

- A. Press 1, *, #, *, *, #
B. Press 9, *, 0

Step 4. Program Location Message

- A. To Turn On Message Press 1, 3, *, 2
B. Press 6, *, (Speak Your Message), #, *, #
(To Replay Message Press 6, #)
C. Program Frequency of Message Press 1, 3, *, _
1= Plays Message (1) Time
2= Plays Message (2) Times (Default)
3= Plays Message Until Receiving Party Presses *
On Their Phone
D. For No Message Press 1, 3, *, 0

Step 5. Exit Program Mode

- A. Press *, #, 0 (You will hear Beep, Beep) *, #